## FA-2725FB-C SHOCK ABSORBER - ADJUSTABLE

# Bansbach easylift



SPECIFICATIONS										
Model		Stroke mm	Max Energy Absorption J(kgf∙m)	Max Equiv. Mass kg(kgf)		Range of Impact Rate m/s		Orifice Type		
FA-27	25FB-C	5FB-C 25 79.3(8.1) 650(650)		650)	0.3~1		Single- orifice type			
COMMON SPECIFICATIONS										
Max Drag N(kgf)		Max Cycle Rate cycle/min	Absorption pe	Max Energy Absorption per min. J/min(kgf·m/min)		Extension Force N(kgf)		erating np. C°	Mass g	
6370(650)		60	539(55)	539(55)		.3(2.78) · lower	-5	5~70	460	

## PRECAUTIONS FOR USE

- Do not use this product without carefully reading the attached owner's manual.
- Ensure that an external stopper (Stopper nut OP-020FB) is also used.
- Do not turn the oil inlet screw located at the bottom of the main unit.
- Ensure that sufficient mounting strength is secured for this product. (As a guideline, it should be 2 to 3 times the maximum drag listed in the catalogue.)
- Do not use this product in a vacuum or a location where it may come in contact with oil.
- Ensure that an eccentric load is not applied to the soft absorber. (Allowable eccentric angle: within ±2.5°)

## **ADJUSTMENT METHOD**

- To adjust, turn the adjustment knob located at the bottom of the main unit.
- Because the adjustment can be done in an analog manner, a value between two integers on the indicator can be set.
- Once the adjustment is complete, secure with a lock screw using a hex wrench.


## **ABSORPTION CHARACTERISTICS**

 
Orifice type	Single-orifice type	Absorption characteristics
Model number	FA-2725FB Series	Resistance
Application	For low speed	Stroke

 
## **OPTIONAL PARTS**

#### Eccentric angle adaptor OP-010FB

- Screw the eccentric angle adaptor into the main unit until the cap for the eccentric angle and the piston rod form a tight connection. While maintaining this position, fasten the main unit's nut until it is secured.
- Use the eccentric angle adaptor when the eccentric angle is 2.5° or larger.
- The main unit can also be used as a stopper.
- Use it with a capless soft absorber.
- The maximum operating eccentric angle with an eccentric angle adaptor is ±10°.
- The caps and the guides for inclined use are not unbundled.

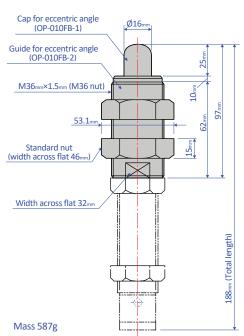







#### Stopper nut OP-020FB

  Adjust so that it stops 1 mm before the stroke end, and fasten with the main unit's nut until secured.

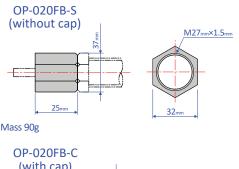




#### Mass 137g


Note: When attaching, make sure that the side without a bearing chamfer is the impact surface.

#### Standard nuts are sold separately as well - M27 Nut

#### Square flange OP-040FB

  Once the attachment site is determined, use the main unit's nut to securely fasten in place.

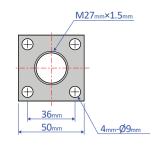




Mass 157g

### Liquid-proof cap FA-2725FB-C-060

- A drip proof cap is fitted on the unit on delivery.
- Liquid-proof caps are not sold separately.
- Ensure that the cap is facing upward. If the cap is facing sideways or downward, it cannot provide an effective means for liquid proofing.

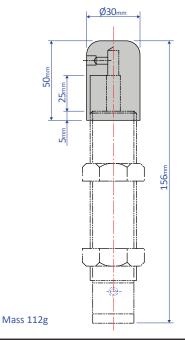

#### Holder with a switch OP-030FB

Although a holder with a switch can be ordered on its own, we strongly recommend ordering one with the main unit. Please include the main unit's model number when placing an order.

