
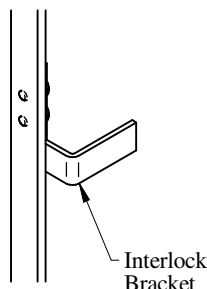


# EN4DSC SERIES

**BUL10324**

REV. A

## ASSEMBLY INSTRUCTIONS FOR ECLIPSE DISCONNECT

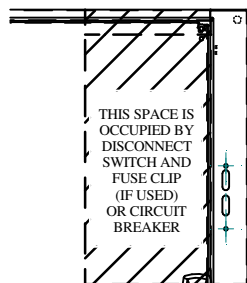

**Step 1** - Drill holes in panel to accept the specific type of disconnect that is being used. See the disconnect manufacturers instructions for drilling information.

**Step 2** - Follow disconnect manufacturers instructions for installation of operating handle.

**Step 3** - Follow disconnect manufacturers instructions for installation of disconnect device on panel.

**Step 4** - Interlock bracket (provided) may need to be adjusted up or down to ensure that operating handle can be moved to ON position when the door is closed. Verify that the door can NOT be opened when operating handle is in the ON position.

### DISCONNECT MOUNTING DETAILS

#### NOTE

In order to maintain the environmental rating of this enclosure, ensure that any installed components (listed or recognized) have the same environmental rating as the enclosure. Ensure all components are installed using the manufacturers installation instructions.

**HAMMOND  
MANUFACTURING™  
ENCLOSURES**



PAGE 1 OF 1

# EN4DSC SERIES

**BUL10324**

REV. A

## ASSEMBLY INSTRUCTIONS FOR ECLIPSE DISCONNECT

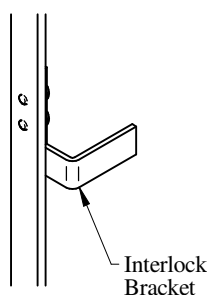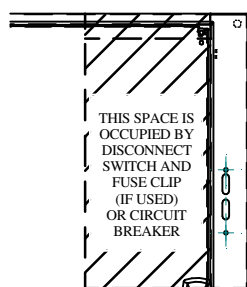

**Step 1** - Drill holes in panel to accept the specific type of disconnect that is being used. See the disconnect manufacturers instructions for drilling information.

**Step 2** - Follow disconnect manufacturers instructions for installation of operating handle.

**Step 3** - Follow disconnect manufacturers instructions for installation of disconnect device on panel.

**Step 4** - Interlock bracket (provided) may need to be adjusted up or down to ensure that operating handle can be moved to ON position when the door is closed. Verify that the door can NOT be opened when operating handle is in the ON position.

### DISCONNECT MOUNTING DETAILS

#### NOTE

In order to maintain the environmental rating of this enclosure, ensure that any installed components (listed or recognized) have the same environmental rating as the enclosure. Ensure all components are installed using the manufacturers installation instructions.

**HAMMOND  
MANUFACTURING™  
ENCLOSURES**

PAGE 1 OF 1