

CS0123 Series

Snap Screw Set


The Screw Snap Set from Transforming Technologies easily installs onto multi-layer rubber or vinyl with a conductive inner layer. The set provides a 10mm stud for grounding of table mats.



How to Install Snap Screw Sets

1. Place ESD matting on workstation. Locate the safest, and most convenient grounding point (outlet).
2. Choose which side of the mat has the closest or most convenient access to the grounding point.
3. Locate an area 1 –2 inches in from each corner of the mat on the side determined in step 2.
4. Make a hole in the mat large enough for the screw to slide through.
5. Place the stud onto screw and turn clockwise until the stud is flush with the ESD mat.

Locate an area about 1-2 inches from the edge of the mat to install snaps.

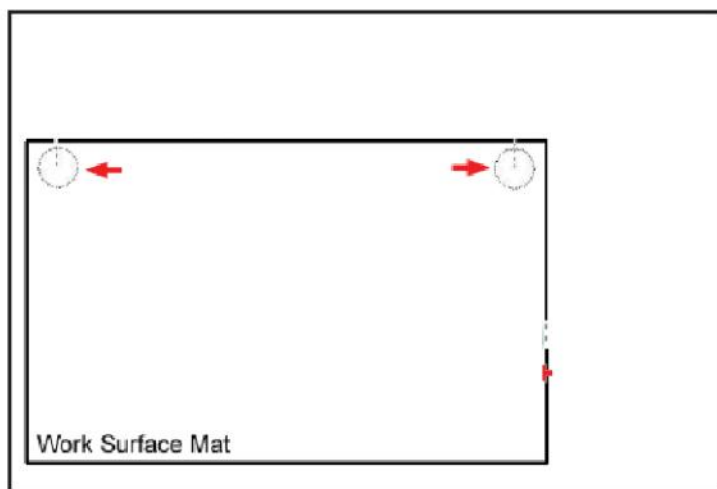

Product Number

<u>Item Number</u>	<u>Description</u>
CS0123	Snap Screw Set, 10mm Male

This document is prepared for our customers as a service, and is to the best of our knowledge true and accurate. However, it is understood and agreed by the users of this document that we will accept no liability for the conclusions reached. Users of this document may therefore wish to perform additional testing before determining that products mentioned are suitable.