


## Quick start guide

# CY7111 EZ-PD™ PMG1-S1 MCU prototyping kit

The CY7111 EZ-PD™ PMG1-S1 MCU prototyping kit is a development platform to design products which can be powered from a high-voltage USB PD port, and also need a microcontroller to implement different applications. This platform is compliant with the USB PD 3.0 protocol and can support up to 100 W (20 V, 5 A) of power consumption.

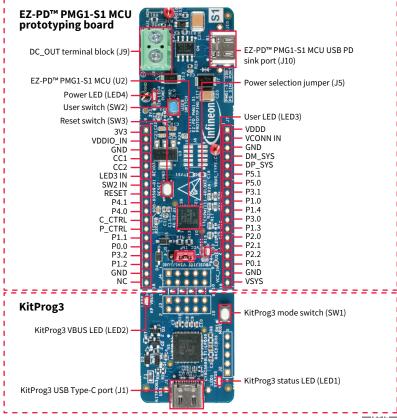



## Before you start

- Ensure that you have a USB PD 3.0-compliant USB-C power adapter (e.g., Apple 30 W USB-C power adapter) with a compatible USB PD 3.0-compliant Type-C cable.
- Download and unzip the CY7111 release package from the CY7111 web page (cypress.com/CY7111).
- Ensure that the jumper shunt on power selection jumper (JS) is placed at position 1-2 to select the USB-C power adapter as the power source for the CY7111 hoard

## Step 1: Hardware connection

- Connect the USB PD sink port (J10) of the CY7111 board to the USB-C power adapter using the USB Type-C cable.
- Confirm that the power LED (LED4) glows green and the user LED (LED3) blinks green.
  Now, the kit is ready for use.

## Step 2: Evaluating the USB PD sink functionality

- Measure the DC\_OUT voltage by connecting a multimeter to the terminal block (J9). Confirm that the DC\_OUT voltage value is within the 4.75 V-21.00 V range. The actual value is determined by the maximum voltage which the USB-C power adapter can supply.
- Remove the multimeter and connect an external load to the terminal block (J9).



The maximum current that can be consumed by an external load cannot exceed 5 A.

## Next steps

> See the CY7111 kit user guide (available as part of the CY7111 kit release package) to learn more about the features supported in the CY7111 hardware and how to develop applications using ModusToolbox™ software.




CY7111 kit contents



From USB-C power adapter

Powering the CY7111 board



USB PD sink setup



Application development using ModusToolbox™ software

## www.infineon.com

Published by Infineon Technologies AG 81726 Munich, Germany

© 2021 Infineon Technologies AG. All Rights Reserved.





Document Number: 002-32419 Rev. \*A

#### Please note

THIS DOCUMENT IS FOR INFORMATION PURPOSES ONLY AND ANY INFORMATION OFWN HEEMS 1914. IN NO PERTIE BECAGABLE AS A WARRANTY, GUARANTEE OR DESCRIPTION OF AMP FUNCTIONALITY, CONDITIONS AND GOOD QUALITY OF CUIP PRODUCTS OR ANY SUITABILITY FOR A PRATICULAR PURPOSE. WITH RECRIAN TO THE TECHNICAL SEPECIATIONS OF ONE PRODUCTS, WE ANNOL AS NO TO TO REFER TO THE RELEVANT PRODUCT DAYS SEED SPRONGED OF IN CONCENTRATIONS OF THE TOWN OF THE SUITABILITY OF OUR PRODUCTS FOR THE INTERNEE APPLICATION.

WE RESERVE THE RIGHT TO CHANGE THIS DOCUMENT AND/OR THE INFORMATION GIVEN HEREIN AT ANY TIME

#### Additional information

For further information on technologies, our products, the application of our products, delivery terms and conditions and/or prices, please contact your nearest Infineon Technologies office (www.infineon.com).

#### Warning

Due to technical requirements, our products may contain dangerous substances. For information on the types in question, please contact your nearest Infineon Technologies office.

Except as otherwise explicitly approved by us in a written document signed by authorized representatives of Inflinon Technologies, our products may not be used in any life-endangering applications, including but not limited to medical, nuclear, military, life-critical or any other applications where a failure of the product or any consequences of the use thereof can result in personal injury.