


May.1.2023 Copyright 2023 HIROSE ELECTRIC CO., LTD. All Rights Reserved.
In case of consideration for using Automotive equipment / device which demand high reliability, kindly contact our sales window correspondents.



- NOTE 1. PER TRAY:50 PIECES.
 2. REFER TO THE DF59 SERIES MATING/UNMATING OPERATION INSTRUCTION MANUAL(ETAD-H0496) FOR THE OPERATING OF THE PRODUCT.
 3. UL(FILE NO. E52653).
 C-UL(FILE NO. E52653) APPROVED PRODUCT.

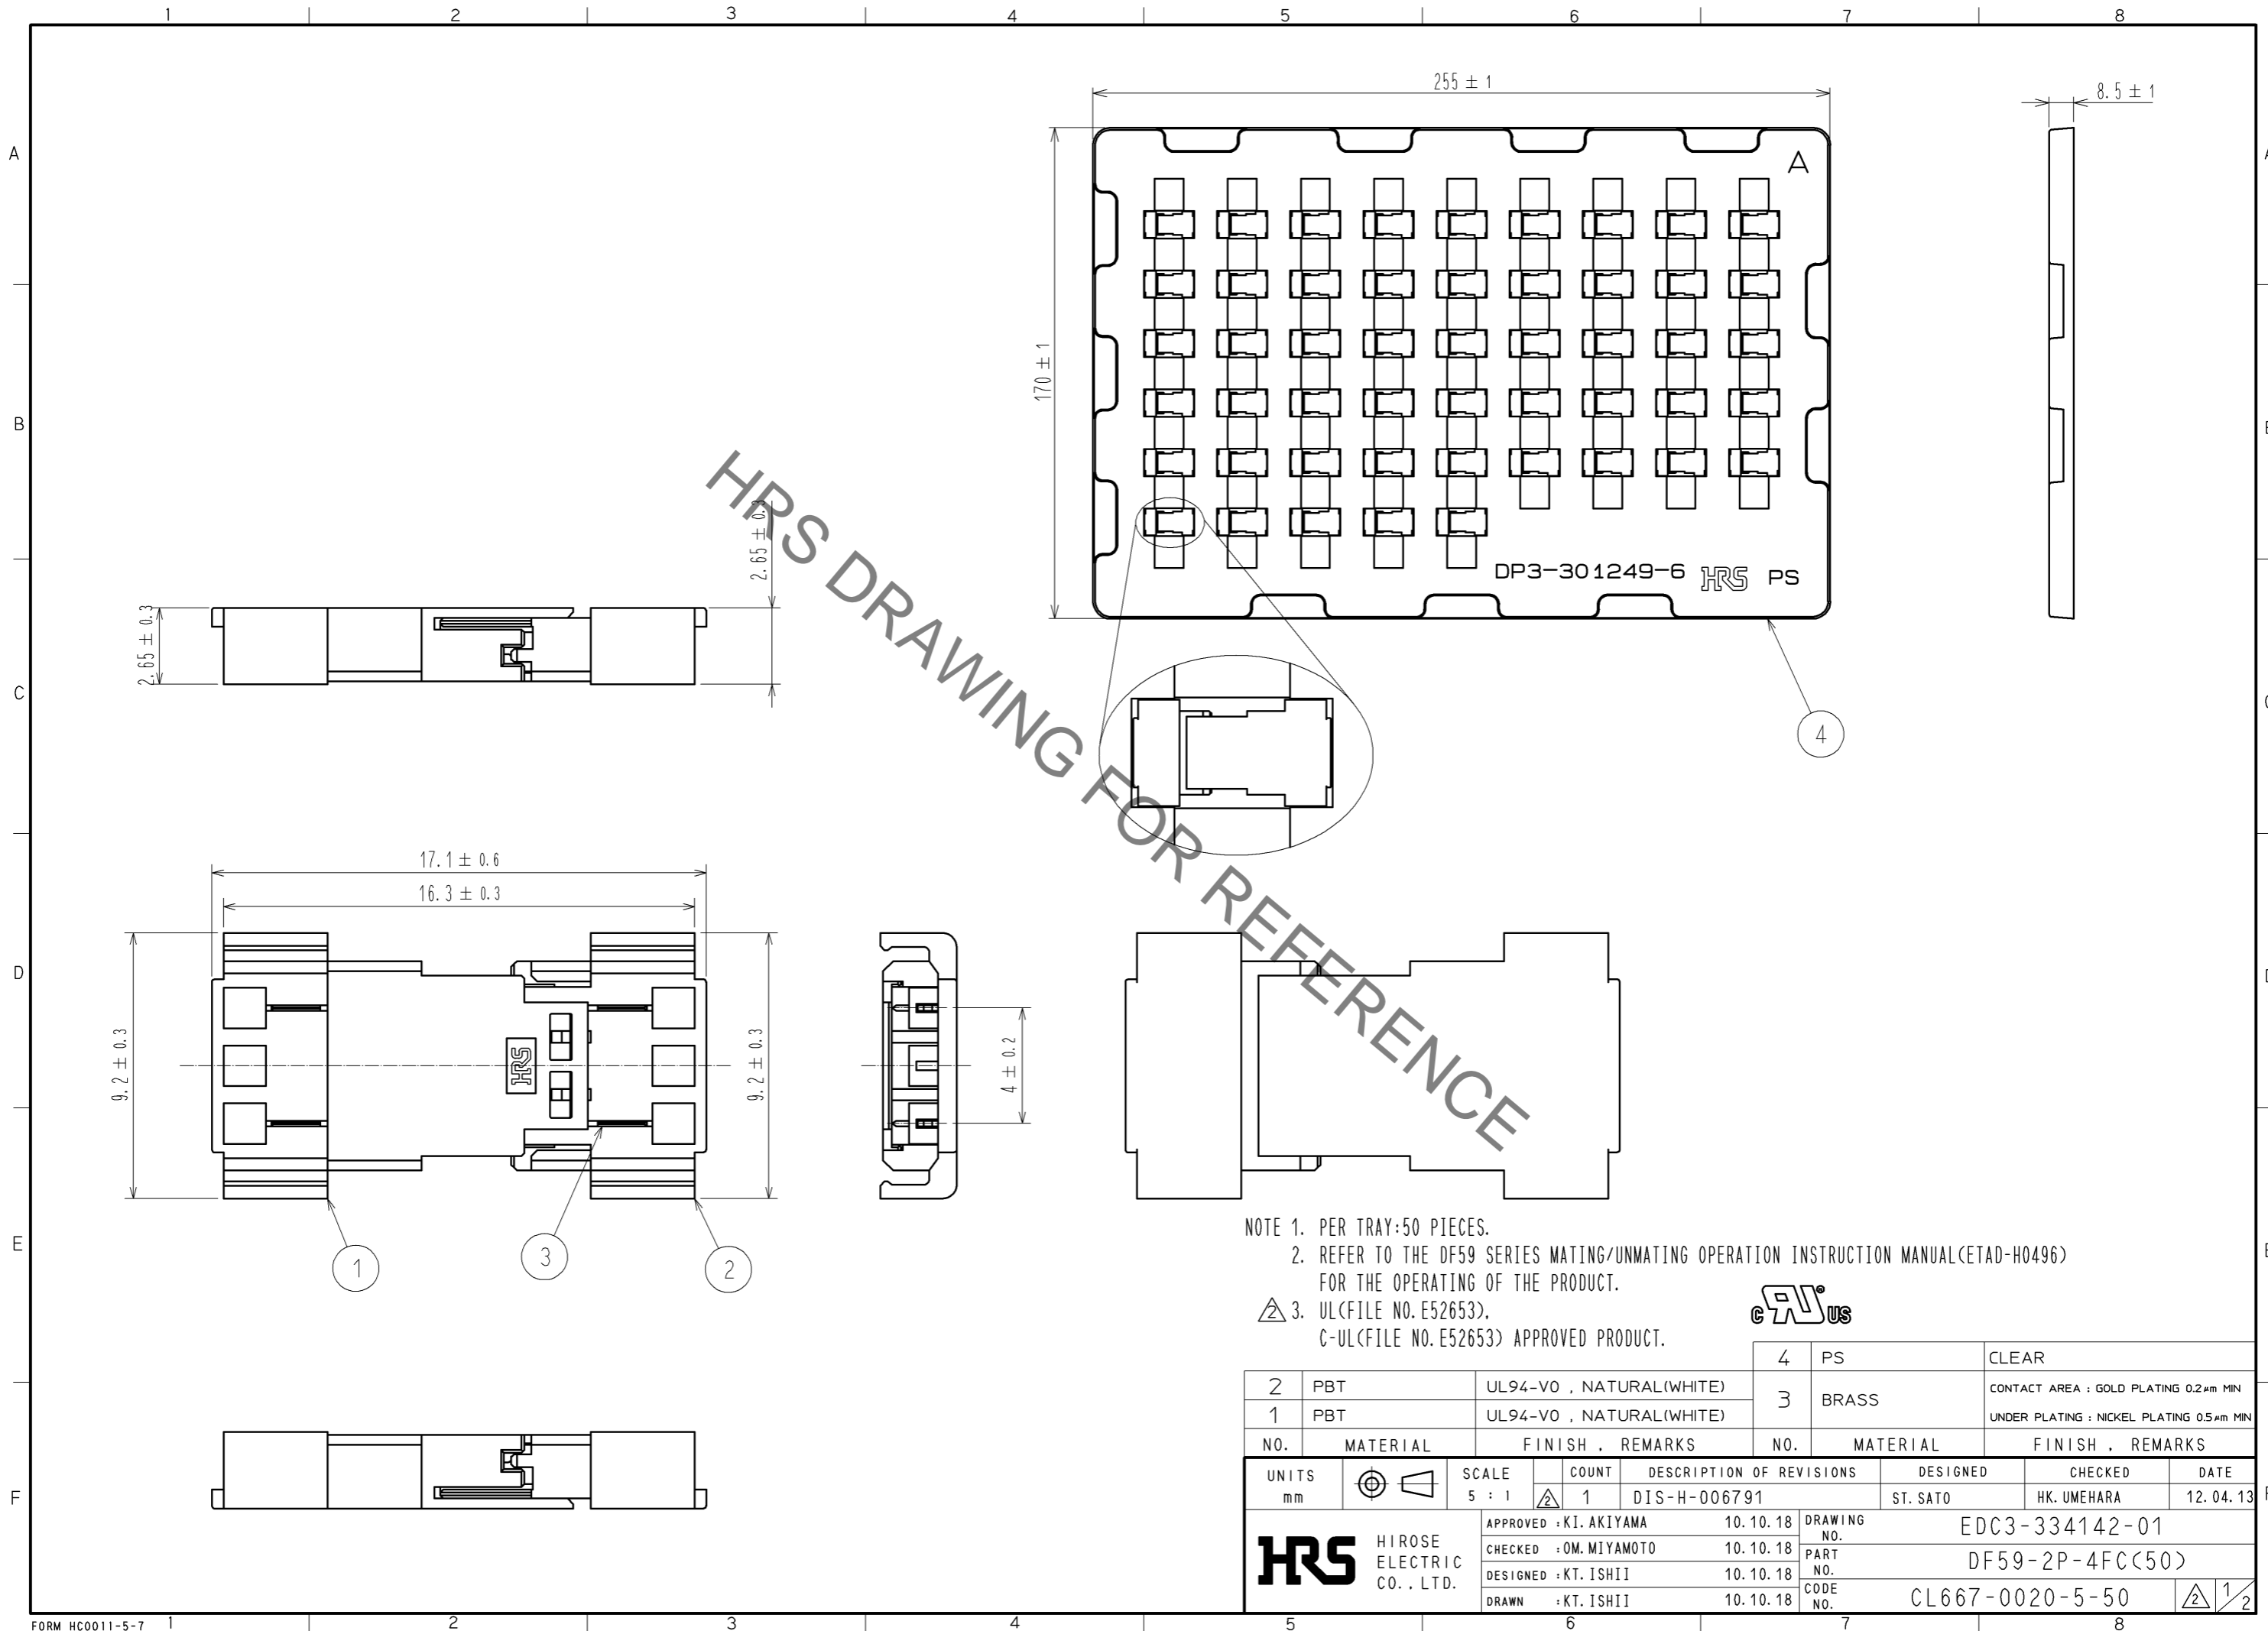


2	PBT	UL94-V0 , NATURAL(WHITE)	4	PS	CLEAR
1	PBT	UL94-V0 , NATURAL(WHITE)	3	BRASS	CONTACT AREA : GOLD PLATING 0.2µm MIN UNDER PLATING : NICKEL PLATING 0.5µm MIN
NO.	MATERIAL	FINISH , REMARKS	NO.	MATERIAL	FINISH , REMARKS
UNITS		SCALE	COUNT	DESCRIPTION OF REVISIONS	
mm		5 : 1	1	DIS-H-006791	
		APPROVED : KI. AKIYAMA	10.10.18	DESIGNED	ST. SATO
HIROSE ELECTRIC CO., LTD.		CHECKED : OM. MIYAMOTO	10.10.18	CHECKED	HK. UMEHARA
		DESIGNED : KT. ISHII	10.10.18	DATE	12.04.13
		DRAWN : KT. ISHII	10.10.18	DRAWING NO.	EDC3-334142-01
				PART NO.	DF59-2P-4FC(50)
				CODE NO.	CL667-0020-5-50


Operation Procedures for Floating Socket

【 Mating 】


1. Hold part A on the floating socket, and place it on the receptacle so that part A matches to part B.

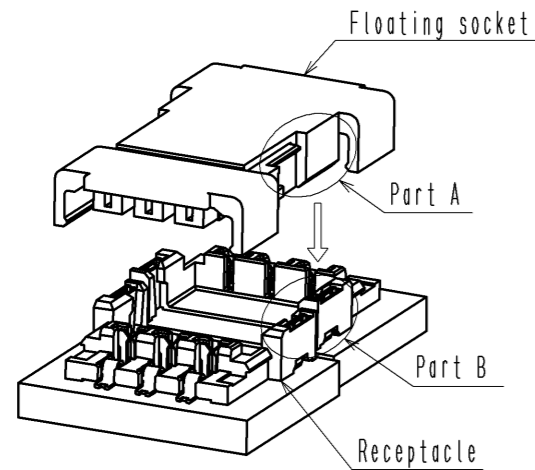

2. Align the floating socket edge on the side of friction lock to receptacle housing edge in a line.
(Forcible mating without above alignment process could cause contact deformation.)

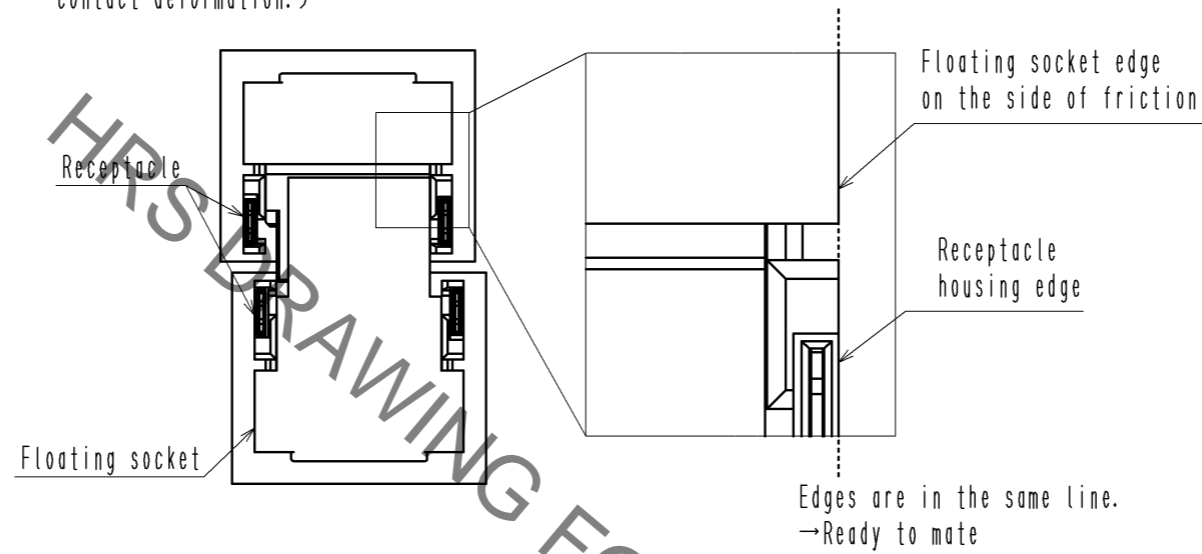


3. Press down at the center surface of the floating socket.
(Press down until the floating socket touches to the receptacle.)

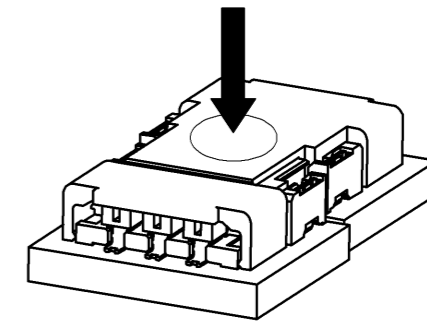


【 Unmating 】

1. Hook the lever on either sides of socket with finger and lift up to the upper direction for unlock.
(Lift up until friction lock is released.)

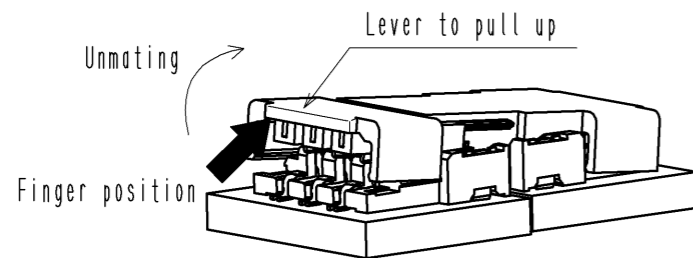

2. After releasing either side, hook the lever on the other side with a finger and lift up to the upper direction, too.

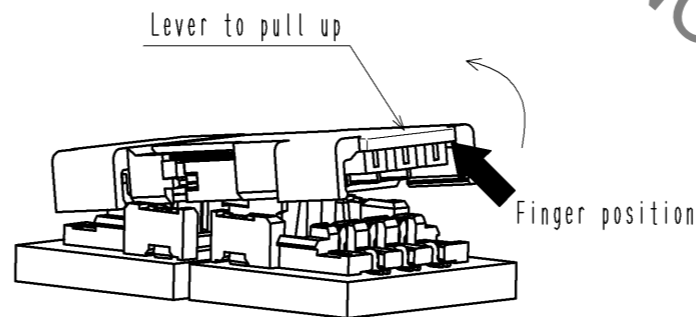

HRS

図番： EDC3-334142-01
製品名： DF59-2P-4FC(50)
製品コード： CL667-0020-5-50

2/2