




Application Tooling Specification Sheet

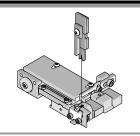

Order No. 63911-9800

FEATURES

- It is ideally suited for mid-volume bench operations
- This terminator can be installed in the TM42 and the TM40 press or Base Unit adapter for 3BF press
- Quick punch removal with the push of a button for fast and easy tooling change
- Track adjustment capabilities in the T2 Terminators for improved control of the bell mouth size and cutoff tablength
- T2 Terminator has standardized tooling with the Molex FineAdjust Applicator which will reduce your inventory requirements


SCOPE


Products: 3.96 (.156") Wire-to-Wire and Wire-to-Board Crimp Terminal, 20-26 AWG.

Terminal Series No.	Terminal Order No.	Wire Size			Insulation	Strip Length			
				IPC/WHMA-A620 (1)				Terminal (2)	
		AWG	mm²	mm	ln.	mm	ln.	mm	ln.
50598	50598-8000	20-26	0.55-0.12	1.25-1.90	.049075	1.25-1.90	.049075	2.70-3.30	.106130
50600	50600-8000	20-26	0.55-0.12	1.25-1.90	.049075	1.25-1.90	.049075	2.70-3.30	.106130

⁽¹⁾ To achieve optimum IPC-A620 Class 2 insulation crimps, use this insulation OD range

DEFINITION OF TERMS

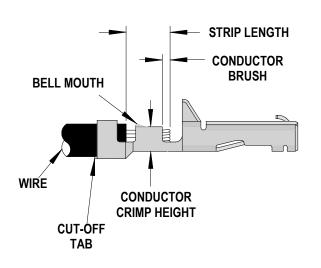

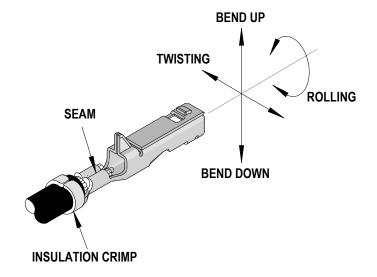

Doc No: ATS-639119800 Release Date: 07-14-11 **UNCONTROLLED COPY** Page 1 of 6 Revision: B Revision Date: 07-14-11

⁽²⁾ Overall insulation OD specification for terminal

CRIMP SPECIFICATION

Terminal Series No.	Bell n	nouth	Cut-off Tak	Maximum	Conductor Brush		
Terminal Series No.	mm	ln.	mm	ln.	mm	ln.	
50598	0.10-0.60	.004024	0.25	.010	0.00-1.00	.000039	
50600	0.10-0.60	.004024	0.25	.010	0.00-1.00	.000039	

	Dand up I	Twist Roll		Punch Width mm (Ref)				Seam	
Terminal Series No.	Dena up			Conductor		Insulation			
	Degree		Degree		mm	ln	mm	ln	Seam shall not be open
50598	4	3	3	8	1.60	.063	2.20	.087	and no wire allowed out
50600	4	3	3	8	1.60	.063	2.20	.102	of the crimping area

After crimping, the crimp profiles should measure the following:

Terminal Series No.	Wire Size			luctor Height		ation eight (Ref)	Pull Force Minimum	
	AWG	mm ²	mm	ln.	mm	ln.	N	Lb.
	20 AWG	0.55	0.95-1.05	.037041	2.55	.100	58.8	13.2
50598	22 AWG	0.35	0.87-0.92	.034036	2.45	.096	39.2	8.8
30396	24 AWG	0.20	0.80-0.85	.032034	2.40	.094	29.4	6.6
	26 AWG	0.12	0.76-0.81	.030032	2.25	.089	14.7	3.3
	20 AWG	0.55	0.95-1.05	.037041	2.55	.100	58.8	13.2
50600	22 AWG	0.35	0.87-0.92	.034036	2.45	.096	39.2	8.8
50600	24 AWG	0.20	0.80-0.85	.032034	2.40	.094	29.4	6.6
	26 AWG	0.12	0.76-0.81	.030032	2.25	.089	14.7	3.3

Tool Qualification Notes:

Pull Force should be measured with no influence from the insulation crimp.
The above specifications are guidelines to an optimum crimp.

Doc No: ATS-639119800 **UNCONTROLLED COPY** Page 2 of 6 Release Date: 07-14-11 Revision: B


Revision Date: 07-14-11

PARTS LIST

T2 Terminator 63911-9800											
Item	Order No	Quantity									
	Perishable Tooling										
	63911-9870	63911-9870	Tool Kit (All "Y" Items)	REF							
1	63444-1609	63444-1609	Conductor Punch	1 Y							
2	63445-1641	63445-1641	Conductor Anvil	1 Y							
3	63446-2214	63446-2214	Insulation Punch	1 Y							
4	63445-2220	63445-2220	Insulation Anvil	1 Y							
5	63443-0002	63443-0002	Front Cut-Off Plunger	1 Y							
6	63443-0012	63443-0012	Front Plunger Retainer	1 Y							
		Other Cor	nponents								
7	11-17-0022	1739-21	Hold Down Spring	1							
8	11-18-4083	60707-8	Feed Guide	1							
9	11-24-1067	4996-4	Cut-off Plunger Spring	1							
10	63443-0009	63443-0009	Front Scrap Chute	1							
11	63443-0024	63443-0024	Key	1							
12	63443-0085	63443-0085	Wire Stop L-Bracket	1							
13	63443-0090	63443-0090	Wire Stop	1							
14	63443-0093	63443-0093	Shank	1							
15	63443-1719	63443-1719	Height Spacer	1							
16	63443-2216	63443-2216	Course Spacer (16.00mm)	1							
17	63443-2301	63443-2301	Fine Spacer (3.05mm)	1							
18	63443-3101	63443-3101	Front Plunger Striker	1							
19	63443-6007	63443-6007	Rear Cover	1							
20	63901-9802	63901-9802	Terminal Hold Down	1							
		Fra	me								
21	63800-8500	63800-8500	T2 Terminator	1							
		Hard	ware								
22	N/A	N/A	M3 by 6 Long FHCS	1**							
23	N/A	N/A	M3 by 6 Long SHCS	2**							
24	N/A	N/A	M3 by 8 Long SHCS	1**							
25	N/A	N/A	M4 by 6 Long SHCS	2**							
26	N/A	N/A	M4 by 12 Long BHCS	2**							
27	N/A	N/A	M4 by 14 Long SHCS	2**							
28	N/A	N/A	M4 by 50 Long SHCS	2**							
29	N/A	N/A	M5 by 12 Long SHCS	1**							
30	N/A	N/A	#10-32 by 3/8"Long BHCS	1**							
** Av	** Available from an industrial supply company such as MSC (1-800-645-7270).										

UNCONTROLLED COPY Page 3 of 6 Doc No: ATS-639119800 Release Date: 07-14-11 Revision: B

Revision Date: 07-14-11

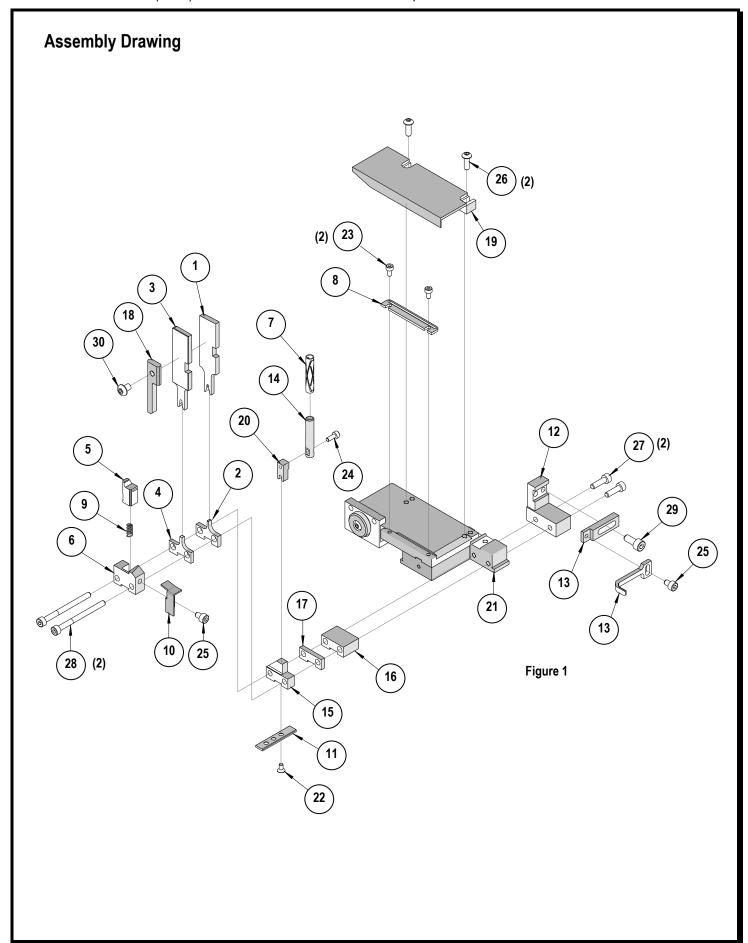


Doc No: ATS-639119800 Revision: B Release Date: 07-14-11 Revision Date: 07-14-11

NOTES

Depending on the press vintage a feed finger assembly is supplied with the T2 Terminator.

- 1. To remove the existing feed finger assembly loosens the M4 x 10 mm set screw in the feed lever.
- 2. Select T2 Feed finger assembly from Terminator box.
- 3. Insert a screwdriver into the slot behind the feed lever and force the feed arm spring to the right.
- 4. Slide the T2 feed finger shaft for TM42 (11-40-5307) or (11-40-0123) for TM40 /Base Unit into the feed lever and to the left of the feed arm spring.
- 5. Release the feed arm spring.
- 6. Position feed finger for selected product. (Refer to Figure 5.1 in the T2 Manual).

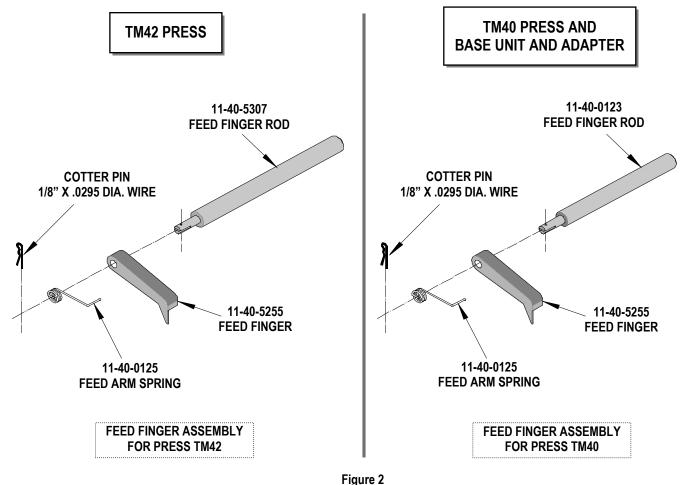

UNCONTROLLED COPY Doc No: ATS-639119800 Release Date: 07-14-11 Page 5 of 6 Revision Date: 07-14-11

Revision: B

NOTES

- 1. Molex recommends an extra perishable tooling kit be maintained at your facility.
- 2. Verify tooling alignment by manually cycling the press before crimping under power. Check that all screws are tight.
- 3. Slugs, Terminals, Dirt and Oil should be kept clear of work area.
- 4. This Terminator should be only used in a Molex TM42, TM40, or 3BF Press with a Base Unit adaptor.
- 5. Wear safety glasses at all times.
- 6. For recommended maintenance refer to the TM40, TM42 Manual.

CAUTION: To prevent injury never operate this Terminator without the guards supplied with the press in place. Reference the TM42 press manufacturer's instruction manual.

CAUTION: Molex crimp specifications are valid only when used with Molex terminals, applicators and tooling.

http://www.molex.com

UNCONTROLLED COPY Doc No: ATS-639119800 Release Date: 07-14-11 Page 6 of 6 Revision Date: 07-14-11

Revision: B