

UFO Junior



UFO Junior

Beyond LED Technology's New Junior UFO High Bay is the newest and most feature rich product of 2021. This Junior fixture offers High Lumens per Watt and it's CCT Adjustable. The UFO Junior is built to last with standard 4kv surge protection, 113°F ambient temperature rating, and IP65 rating for elimination of dust, moisture, and airborne contaminants. The unique easy connect driver to optical assembly interface allows for quick and easy maintenance for applications including warehousing, gymnasiums, manufacturing, and outdoor canopies. Our Junior High Bay is fully ready to integrate with most smart control systems.

- Up to 155 Lumens per watt
- CCT Adjustable 3000K, 4000K, & 5000K
- Ultra thin Sleek Design
- 0-10V Dimming capability
- Plug and Play Motion Sensor
- Several mounting options


- IP65 water, dust, corrosion, and pressure proof
- Optional Emergency backup
- Universal 100-277Vac / 480Vac optional
- DLC listed
- Various installation methods

UFO Junior

Installation

Ceiling Mount:

- 1. Mark with a mark pen or sharp tool on the mounting surface and drill. (figure 3)
- 2. Fix screws into the holes with a hammer. (figure 4)
- 3. Align the bracket hole with screw hole (figure 5), and push the fixture to one side (figure 6) and fix it.
- 4. After installation, connect the wire of the fixture to the mains according to local wiring rules, ensure the connection is stable and make good protection on the connection. By adjusting the brackets screws, users can adjust 50° to the left or right vertically. (figure 7)

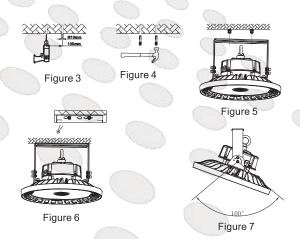

1/2"NPT Mount

- 1. Unscrew the nuts on 1/2" NTP. (figure 8) 2. Insert 1/2" NTP stem into the bracket hole. (figure 9)
- 3. Re-screw the nuts. (figure 10)
- 4. After installation, connect the wire of the fixture to the mains according to local wiring rules, ensure the connection is stable and make good protection on the connection. By adjusting the brackets screws, users can adjust 50° to the left or right vertically. (figure

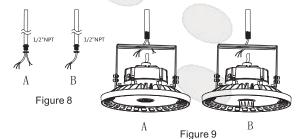




Figure 10

Figure 11 *****

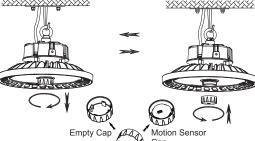


Figure 12

Installation of DC motion sensor

It could be easily installed without using any tools. Choose whether to install the motion ensor or not as per your demand (figure 12); if not, unscrew the motion sensor and replace it with a protection cover, and vice versa. Note: the motion sensor has no dialing code, and a remote controlis needed for adjustment. Please refer to the instruciton for remote control adjustment.

Warning / Avertissement:

MIN 90°C SUPPLY CONDUCTOR.

THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.


LES FILS D'ALIMENTATION 90°C MIN. CE PRODUIT DOIT ÊTRE INSTALLÉ SELON LE CODE D'INSTALLATION PERTINENT, PAR UNE PERSONNE QUI CONNAÎT BIEN LE PRODUIT ET SON FONCTIONNEMENT AINSI QUE LES RISQUES INHÉRENTS.

(866) 786-1117 • www.BeyondLEDTechnology.com



UFO Junior Series

Motion Sensor Specifications - SKU 152598

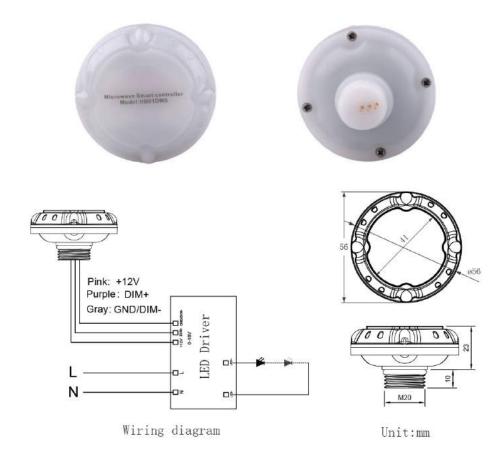




















Operating voltage	12±2V DC
Operating current	30mA
Output	DIM O-10V
Stand-by power	<0.5W
Brightness	70%/80%/90%/100%
Sensitivîty	20%/50%/75%/100%
Hold time	10s/lmin/10min/30min
Daylight threshold	10Lux/30Lux/50Lux/100Lux/Disable
Stand-by time	$imin/30min/60min/+\infty$
Stand-by dimming level	10%/20%/30%/50%
Microwave frequency	5. SGHz ±75MHz
Microwave power	<0.5mW
Detection angle	30-150*
Control line	Pink:+12V: Purple:DIM+: Gray:GND/DIM-
Mounting height	Max. 15m(ceiling mounted)
Detection range	Max.015m(ceiling mounted) Max.20m(wall mounted
Operating temperature	-30° C^+60° C
IP rating	IP65

UFO Junior Series


Motion Sensor Specifications - SKU 152598

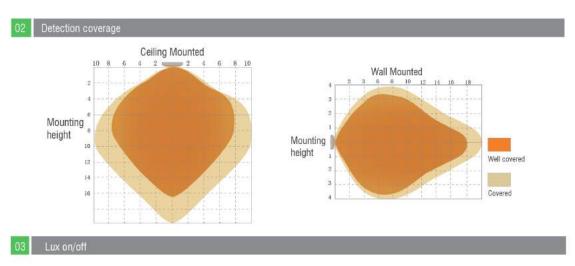

Adopted dual PD technology, HB01DMS-A/B is able to differentiate artificial light brightness from natural light after installed inside the fixture, and automatically turn off light when ambient brightness exceeds preset lux level.

Preconditions to use the Lux-off function:

- Stand-by period is +∞;
- 2. Stand-by dimming level is on 10%, 20%, 30% or 50%;
- 3. Daylight threshold is on 10Lux, 30Lux, 50Lux or 100Lux.

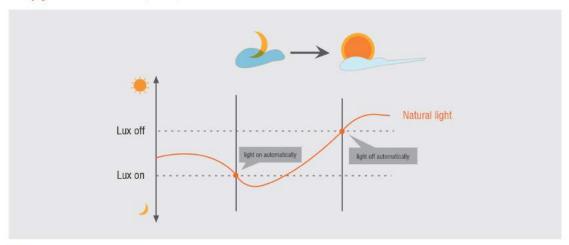

04 Application—Lux on/off




Light automatically on when ambient brightness is lower than preset lux level.



With insufficient ambient brightness, light dims to 100% when motion detected.



Light dims to stand-by level if no motion detected after hold time.

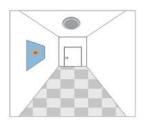

Light off when ambient lux level is higher than preset lux amount.





UFO Junior Series

Motion Sensor Remote Control Specifications - SKU 152613

HB03R

Remote for dimmable sensors



-Display Area

BRIGHTNESS (70%/80%/90%/100%)
DAYLIGHT (101x/301x/501x/1001x)
STANDBY DIM (10%/20%/30%/50%)

HOLD TIME (108/1min/10min/30min)

SENSITIVITY (20%/50%/75%/100%)

STANDBY TIME (+ ∞ /1min/30min/60min)

Button Setting Area

- ON ON/OFF (Long press the "ON/OFF" button until the brightness indicator light is on(First-row). Press to turn on or turn off the fixture.)
- BRIGHTNESS (Press to adjust dimming level 70%/80%/90%/100%.)
- (SEND) SEND (Press to save settings after each change. The indicator light confirms the save setting.)
- (O) HOLD TIME (Press to adjust hold time 10s/1min/10min/30min.)
- (Long press the button until the daylight indicator light is on, press to adjust daylight threshold 10lx/30lx/50lx/100lx.)
- SENSITIVITY (Press to adjust sensitivity 20%/50%/75%/100%.) Note: PIR Motion Sensor have no sensitivity setting the default 100%.
- STANDBY DIM (Press to adjust stand-by dimming level 10%/20%/30%/50%.)
- STANDBY TIME (Press to adjust stand-by time + \infty / 1 min/30min/60min.)

 Note: "+\infty "means unlimited stand-by time, and the light control mode is the light control priority mode, otherwise it's the light threshold mode.

Note: 100 means animiliad stand-by unic, and the light control mode is the light control profity mode, otherwise it a the light unleshold mode

Proce #DE

Press "RESET"button,products with DIP switch will be controlled by DIP switches; Otherwise all the setting will change, which is Brightness 70%/ Hold time 10s/ Sensitivity 20%/ Daylight threshold disable/Stand-by dimming level 10% / Stand-by time+∞.

TEST) TEST

The button "TEST" is for testing purpose after debugging. Pressing this button, the sensor goes to test mode (hold time is only 3s).

- (+) Press to increase brightness(0-100%).
- (-) Press to reduce brightness(100%-0%).

Attention

- 1. If you want to send a setting, it will only work if the remote control is on. If you don't press any button within 10 seconds, the indicator light will go out.
- 2. When using "ON/OFF" button, the rest buttons except the "ON/OFF", "BRIGHTNESS" and "SEND" buttons will be disabled.
- 3. When using "TEST" button, the rest buttons except the "TEST", "SENSITIVITY" and "SEND" buttons will be disabled.
- 4. Every change needs to press "SEND" button, it will be saved.
- 5. Beacuse of the power supply DIMMING ratio difference, when using different power, "BRIGHTNESS" and "STANDBY DIM" adjust percentage of the power will have difference with the measured power.
- 6. Light control priority mode: the on/off illumination values of each gear are 10 lx/50 lx, 30 lx/100 lx, 50 lx/150 lx and 100 lx/200 lx.
- 7. Light threshold mode: the on/off illumination values of each gear is 10k/30k/50k/100kx, when the light intensity is less than set value and the movement of someone or an object is induced, the light is turned on to the preset brightness.

UFO Junior Series

User Notice

- Please turn off the power before installing or changing assembly parts.
- The input voltage and lamps should be matching. Before connecting the power line, please make sure the wiring section is insulated.
- Only professionals should install and disassemble the lamps.

Trouble Shooting

- Flickering light Turn off the power and turn on again in 3 minutes. If the same phenomena occurs, then call Support.
 - Not working Please check all power connections.

Application











UFO Junior Series

Application



